LANactive Management Software

LANACTIVE MANAGER CONTROLLER LICENCE

Aginode Ref: 88301920

The LANactive Manager Controller Licence allows the usage of LANactive Manager as a controller instance on a separate hardware. It allows multiple user access from differents PCs.

LANactive Management Software

Management Software for all LANactive switches

- Zero-Touch Configuration
- Web interface
- Extensive diagnostic functionality
- Secure communication between software, switches and clients

Controller Version

Aginode LANactive Manager with Controller License is based on the controller installation package.

Zero-Touch Configuration

Aginode LANactive Zero-Touch Configuration is part of the LANactive Manager in combination with the controller license and is a contemporary way of designing, build-ing and operating networks with minimum effort. The use of LANactive switches in combination with the LANactive Manager ensures networks are fully automated, flexi-ble and scalable. After connecting a Aginode LANactive switch to a network segment, the switch will automatically link to its controller to receive provisioned firmware and configuration.

Fully Automated Operation

Next to the Zero-Touch Configuration feature, LANactive Manager provides several fully automated tasks e.g. a scheduled configuration or firmware update for all or dedicated devices, a Master-Configuration option or Autodiscovery functionality.

Increased Security

All drawings, designs, specifications, plans and particulars of weights, size and dimensions contained in the technical or commercial documentation of Aginode is indicative only and shall not be binding on Aginode or be treated as constituting a representation on the part of Aginode.

^	Gol	val+Link State	fig to Device) Show C							
		Refresh interval (seconds): 1 [Manual Refresh] Cable Diagnostic all TP Parts							Local Log: Show Entries. Log entries present 538	
		of Link State to Description	Name	Power Setup	Link Setup	Link State	Link/SEP Alarm State	Time since last link change	Enar Counter	50
	0	MGMT				-				
			Drucker	01	lutoneo.	100 FDX	No alarm	28 days : 23 hours : 47 min : 16 sec	0	Dis
	2	TP-2	WLAN-Access-Point - Ar-	Add BC	Autoneg	no link	No alarm	36 days 20 hours 28 min 32 sec	0	Dis
			Reckers	Off	Autoneg.	no link	No alarm	0 days : 21 hours : 30 min : 45 sec	0	Dist
	4	TP-4	Frenken	Off	Autonep.	no link	No alarm	0 days : 02 hours : 05 min : 15 sec	0	Dis
	5	UPLINK-SEP	(none)		100 FDX	100 FEXC	No alarm	174 days : 21 hours : 51 min : 38 sec	0	Dis
	6	UPLINK-TP	Choneo		Autoneg.	no link	No alarm	No change since last reboot	0	Disi
		Jobal State			503 Dec		3.943			
	1	emperature (1C):			503 Inter		3.502	PoE Input Voltage (V): 4		
	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM	PoE Input Voltage (r): 47 Total Boots: 10		
	1	emperature (1C): Iptime:					1.25.44 PM			
	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM			
	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM			
	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM			
	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM			
	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM			
	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM			
а	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM			
	1	emperature (1C): Iptime:	174 days : 21 hours : 51 min		Time from time or	rver. 8/25/2017	1.25.44 PM			

Page 1/3



LANactive Manager uses only encrypted and secured communication with the con-nected LANactive switches to increase the security level and avoid unwanted access to data.

Test Version for Evaluation

LANactive Manager can be downloaded free of charge for evaluation purposes. Com-pared to the licensed version, the following restrictions apply:

- Delayed starting screen for registration key request
- Maximum five switches can be saved in a database

Support Portal

The LANactive Manager documentation can be loaded via help menu as a PDF file or at the Aginode ANS Support Portal. Please visit Aginode ANS Support Portal at: https://www.nexans-ans.de/support/

All drawings, designs, specifications, plans and particulars of weights, size and dimensions contained in the technical or commercial documentation of Aginode is indicative only and shall not be binding on Aginode or be treated as constituting a representation on the part of Aginode.



Page 2 / 3

LANactive Manager Controller Licence

Characteristics

문서

Detailed Datasheet pdf — 808.8 KB 다운로드 🛓

All drawings, designs, specifications, plans and particulars of weights, size and dimensions contained in the technical or commercial documentation of Aginode is indicative only and shall not be binding on Aginode or be treated as constituting a representation on the part of Aginode.



Page 3/3